


## Relays & Fuses

### Diagrams and Descriptions

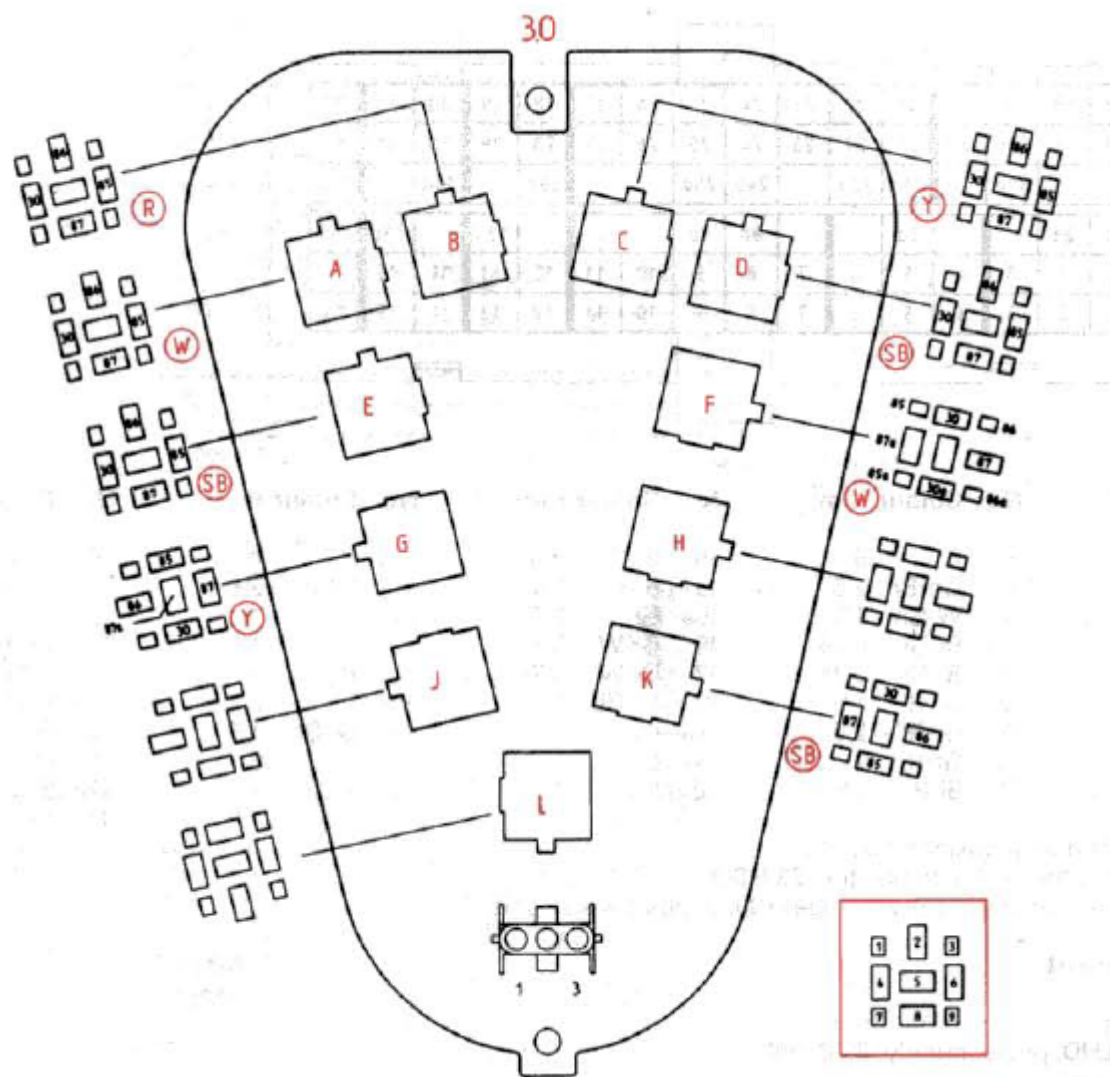

RELAY	RELAY NUMBER	RELAY DESCRIPTION
A	3.13	Headlight
B	3.04	Terminal 75
C	3.03	Ignition (Terminal 15)
D	3.22/3.16	Relay, Auxiliary Water Pump (B18EP/FP engines)/Relay, Auxiliary Water Pump (B18FT engine)
E	3.05	Air Conditioning
F	3.06	Double Acting-Headlight Motors
G	3.14	Inhibitor, Headlight Dim-Dip System
H	3.08	NOT SHOWN IN HAYNES MANUAL (Possibly Fog light?)
J	3.10	ABS Power
K	3.09	ABS Pump
L	3.11	Bulb Failure Detector, Front Bulbs

## Relays & Fuses

### Diagrams and Descriptions

FUSE	DESCRIPTION	AMP
1	Blower Speed 1,2,3,4	
2	Radio Search Light Radio RHD	
3		
4	Mirro 2x	
5		
6	Wiper & Washer Motor Front & Rear Heated Seats	
7	Airco Compr Brake Lights Spd 1 Electric Fan	
8	Central Door Lock Long Range Lights Horns	
9	Wiper Motor Front & Rear Via CEM	
10	Hazard Warning & Direct Light Washer Head Lamp	
11	Rear Fog Lamp LHD	
12	Fuel Pump	
13	Heated Lambda Sonde	
14	Dipped Beam Left	
15	Dipped Beam Right	
16	Supply Instrument	
17	Panel Instrument Illuminated Light Switch CEM	
18	Reverse Lights Heating Airco Rear Bulb Failure	
19	Day Running Lights Dip Dim RHD	
20		
21	Supply Cigar Lighter Instrum Radio Illum Lock	10
22	Illum Glove Box Luggage Interior Clock	
23		
24	Light Flash Front Fog Light Rear & Front	
25	Rear De-Mist Heated Mirror 2x	
26	Pop Up Motor L&R	
27	Window Lifts MoonRoof	
28	Parking Left & Rear Light L&R Rheostat Dip Dim	
29	Parking Left & Rear Light L&R Fog Lights Rear & Front	
30	Main Beam Left CEM	
31	Main Beam Right Switch Long Range Dip Dim	
32	ABS	

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32